SONY

DPF-A72/E72/D72

Digital Photo Frame

Read This First

Welcome to the Sony DPF-A72/E72/D72 Digital Photo Frame.

This leaflet explains preparations and basic viewing procedures.
To enjoy a variety of viewing options or customize your photo frame, please read the operating instructions also supplied.

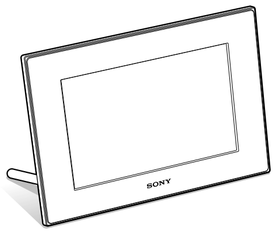

S-Frame

© 2009 Sony Corporation Printed in China

4-129-237-11(2)

Checking the contents of the package

Digital photo frame (1)

Stand (1)



Remote control (1)



AC adaptor (1)



Operating Instructions (1)

Read This First (this manual) (1)

Exchangeable panel (2) (DPF-E72 only)

Warranty (1)
(In some regions, the warranty is not supplied.)

Tips

The illustrations in this manual are of the DPF-D72.
The DPF-A72/E72 are not equipped with the CompactFlash card/Microdrive slot.
The screen displays are also of the DPF-D72 and may be different from those of the DPP-A72/E72.

1 Preparing the remote control.

The supplied lithium battery (CR2025) has already been inserted into the remote control.

Pull out the protective sheet before use as shown in the figure.

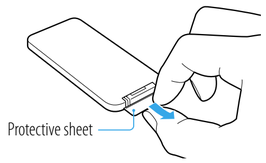

2 Preparing the photo frame.

Screw the stand supplied with the photo frame into the screw hole firmly until the stand stops turning (when you use the photo frame as a photo stand).

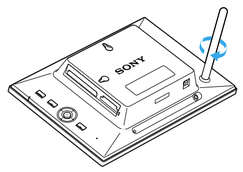

3 Connecting to the AC power source.

1 Insert the plug of the AC adaptor into the DC IN 5 V jack on the rear of the photo frame.

2 Connect the AC adaptor to the wall outlet.
The photo frame is automatically turned on.

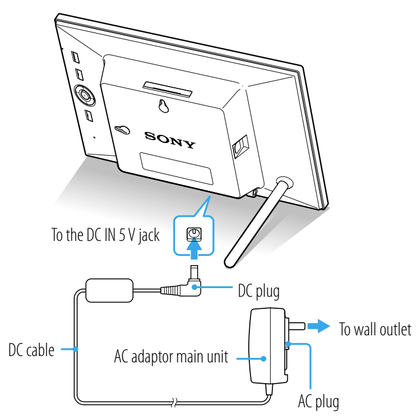

4 Turn the photo frame on.

The photo frame is automatically turned on when it is connected to the AC power source. Only when the power is off with the AC adaptor connected to the wall outlet, the step 4 is necessary.

1 Press ⏻ (on/standby) button.
The standby indicator turns green and the Sony logo on the front panel lights up.

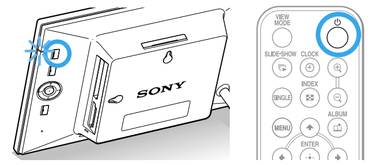

Tips

- When using the DPF-E72, the Sony logo does not light up.
- When you use the auto power on/off function, keep the photo frame connected to the AC power source.
- If you keep the photo frame disconnected to the AC power source for an extended period of time, the following setting is returned to its factory setting:
  – the setting value of [Date/time settings]

5 Set the current time.

1 Press MENU.

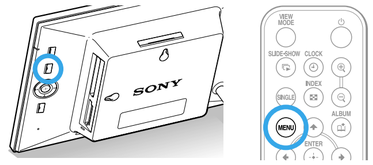

2 Press ←/→ to select the (Settings) tab.

3 Press ↑/↓ to select [Date/time settings] and then press ⊕.

4 Set the current time following the guidance on the screen.

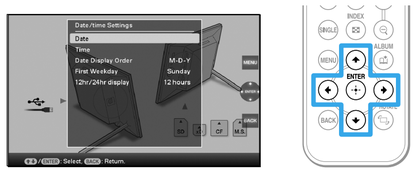

6 Insert a memory card into the slot.

1 Insert a memory card firmly into the corresponding slot.
The access lamp flashes when the memory card is inserted correctly. Reinsert the memory card after checking the label side of the memory card if the access lamp does not flash.
The status of each memory card is as follows.

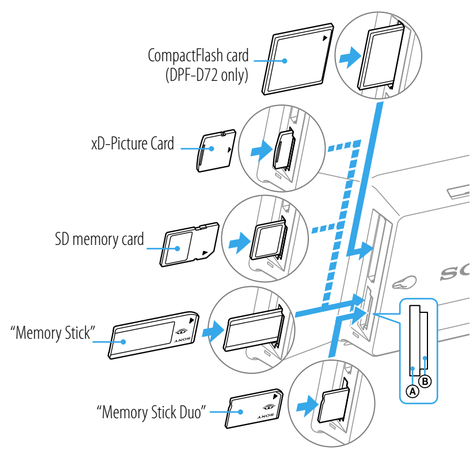

Notes

- All memory cards have a back-side and front-side, and an insertion direction. Refer to the illustration and insert the memory card while you take note of its shape and the appropriate slot.
  It may cause malfunction if you insert the card in the wrong direction.
- **Do not insert multiple memory cards into Ⓐ, Ⓑ, or CompactFlash card/Microdrive (DPF-D72 only) slots simultaneously. If multiple memory cards are inserted, the photo frame will not work properly.**

2 The slideshow of the memory card you inserted starts automatically.
You can enjoy a variety of slideshow styles. (⇨)

Let's use various functions

1 Press VIEW MODE.

The view mode screen is displayed.

2 Select the group you want.

Press (Clock and calendar), (Slideshow), (Index), or (Single) on the remote. Or press ←/→/↑/↓ to move the cursor to group area and then press ←/→ on the photo frame to select the group you want.

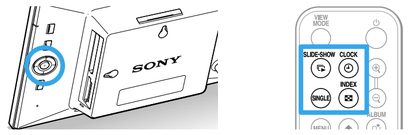

Tips

The image illustration is the view mode screen of the clock and calendar. Slideshow, index, and single has each view mode screen.

3 Select the style you want.

Press ←/→/↑/↓ to select the style you want, the press ⊕.

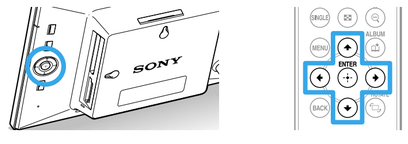

The displaying screen

Refer to "Changing the display" on the operating instruction.

Clock and Calendar display

Note

You cannot perform the setting operation of the menu when you display the clock and calendar display.

Slideshow

Tips

- The playback order of the images is same as the one you selected in [Listing Order] on [General Settings].
- Refer to the "Changing the settings" in the operating instructions.
- When you select [Time Machine] in a slideshow mode (DPF-D72 only), the day when the image is shot or the day the file was updated is displayed.

Index image display

Tips

The listing order of the images is same as the one you selected in [Listing Order] on [General Settings].

Single view mode

About the display orientation

You can set the photo frame to portrait or landscape orientation by rotating it without moving the stand. You can also use this function when you display the photo frame on the wall.

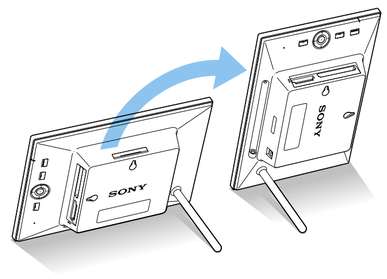

When the photo frame is placed in the portrait orientation, the image is also automatically rotated to its proper orientation.

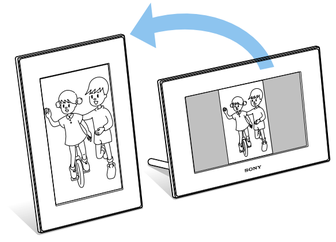

Setting the Auto display orientation

1 Press MENU.

2 Press ←/→ to select the (Settings) tab.

3 Press ↑/↓ to select [General Settings] and press ⊕.
Then press ↑/↓ to select [ON] in [Auto display orientation] and press ⊕.

Notes

- Check whether the stand is stable. If the stand is not set properly, the photo frame may fall over.
- Store the stand in the storage slot when you display the photo frame on the wall.
- When the photo frame is rotated to the portrait orientation, the Sony logo doesn't light up (DPF-A72/D72 only).
- The photo frame does not detect and rotate the orientation of images when [General Settings]-[Auto display orientation] on the (Settings) tab is set to [OFF].

Connecting to a computer

You can connect to a computer to view and copy images from the internal memory of the photo frame to the computer, and copy images from the computer to the photo frame.

➡ Refer to "Connecting to a computer" in the operating instructions.

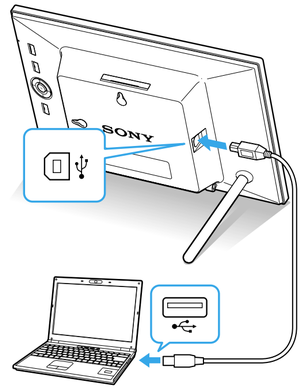

Various function (Setting using the MENU button)

Adding image to the internal memory

➡ Refer to "Adding image to the internal memory" in the operating instructions.

Auto power on/off

➡ Refer to "Changing the settings of the auto power on/off function" in the operating instructions.
(This window is displayed only when you are using DPF-D72.)

Changing the settings

➡ Refer to "Changing the settings" in the operating instructions.